


ONW AND VNW MANUAL MODE

1. SWITCH IS REQUIRED TO TURN LOAD ON.
 2. LOAD TURNS OFF WHEN SENSOR TIMES OUT OR WITH SWITCH.
 3. IF DAYLIGHT SENSOR IS ENABLED AND LIGHT LEVEL IS ABOVE SETPOINT, LOAD WILL NOT TURN ON.
- ONW - AUTOMATIC MODE
1. WHEN SENSOR ACTIVATES LOAD TURNS ON.
 2. SWITCH CAN BE USED TO TURN LOAD ON OR OFF.
 3. IF DAYLIGHT SENSOR IS ENABLED AND LIGHT LEVEL IS ABOVE SETPOINT, LOAD WILL NOT TURN ON.

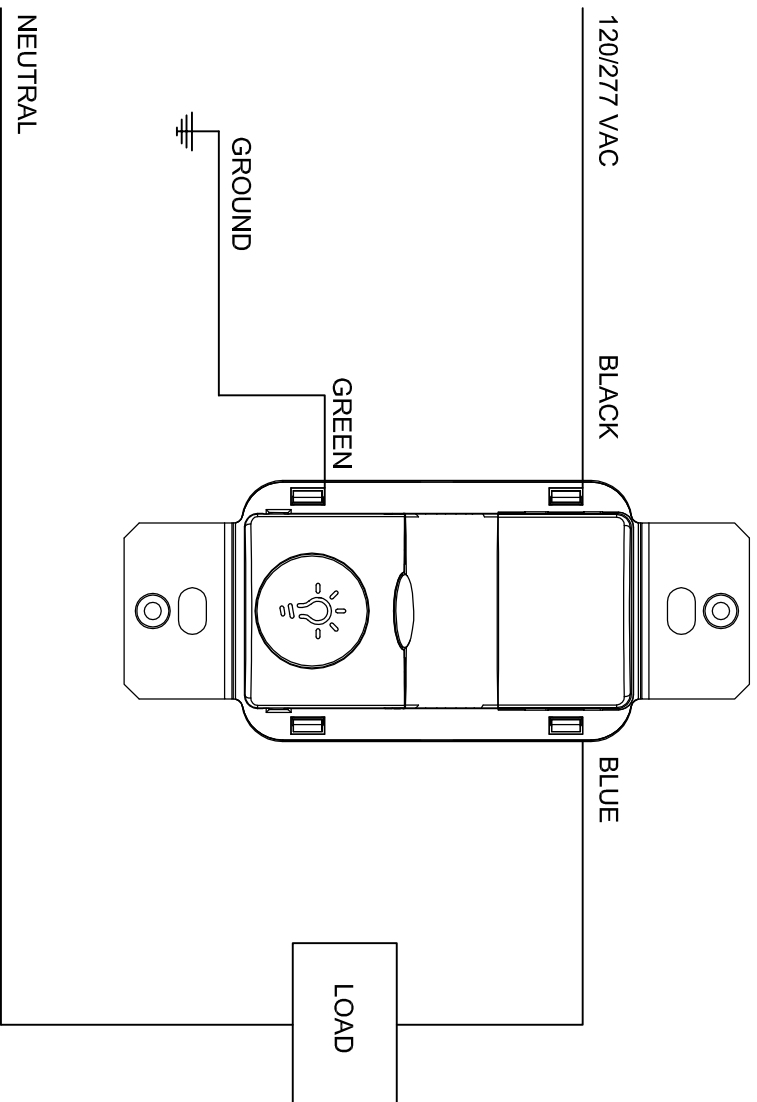

NOTES:
1. SENSOR TYPE INCLUDE ONW-P-1001-AMV, VNW-P-1001-AMV.



PROJECT WALL SWITCH SENSOR WIRING DIAGRAM

TITLE

PIR NEOSWITCH SENSOR
SINGLE LEVEL SWITCHING
(GROUND REQUIRED)

DRAWN BY		CHECKED BY		APPROVED BY	
DATE		SCALE		REV.	
06-19-2013		N.T.S.		A	
DWG NO.		N9-100-1-0000-000			

Tel: 1-800-553-3879
Fax: 1-800-954-7016
Addr: 203 Cooper Circle
Peachtree City, GA 30269, USA
ControlsSales@cooperindustries.com
www.coopercontrol.com