

INSTALLATION INSTRUCTIONS

IMPORTANT: READ CAREFULLY BEFORE INSTALLING FIXTURE.

Talon Medium Sheet 1 of 3

11/29/07

IMI-687



WARNING: Risk of Fire/Electric Shock. If not qualified, consult an electrician.

WARNING: Risk of Electric Shock. Disconnect power at fuse or circuit breaker before installing or servicing.

WARNING: Risk of Burn. Disconnect power and allow fixture to cool before changing bulb or handling fixture.



WARNING: Risk of Personal Injury. Fixture may become damaged and/or unstable if not installed properly. Tighten all fixture components to their recommended torque values.

WARNING: Risk of Fire/Electrical Shock. Upside down installation can result in overheating or accumulation of water in fixture. Install right side up.

Tools Required Socket, 5/16" Socket, 3/4" Deep Well Socket, Electrical wiring tools.

NOTE: These luminaires are designed for outdoor lighting services, and should not be used in area of limited ventilation or in high ambient temperature enclosures. Construction is suitable for down lighting only. Best results will be obtained if installed and maintained according to the following recommendations.

1. Remove housing assembly and arm components from carton. Remove power tray if fixture is not hard mount version.
2. With the fixture on its back, open and remove door by pressing thumb latches outward at the same time, open the door and lift it from the hinges. **FIG. 1**
3. Run the threaded rods (2) through the center of the semi-enclosed hole details in the arm extrusion. To help orient the arm correctly with the housing, please note that one end of the extruded arm has an angled cut and the other has a perpendicular cut with two drain notches located on the bottom. If assembling to a round pole, use the round pole adapter with the drain channels located at the extruded arm end with the drain slots. Mate the angled side of the extruded arm to the housing so that the bottom surface of the extrusion is parallel to the bottom of the fixture, and the drain notches are facing down and located away from the housing. **FIG. 2** Slide the threaded rods into the interior of the housing. Attach flat washer, lock washer, and nut into place in the order shown in **FIG. 2**. Torque hex nuts to 450 lb/in.
4. If necessary, remove the cap on the pole. Position the housing and arm to assemble it to the pole. Lower the nut plate into the interior of the pole as shown. Slide the threaded rods through the pole and thread into the nut plate until the rod protrudes through the nut plate slightly. Tighten both nuts located inside of the housing to 30 lb/ft of torque.

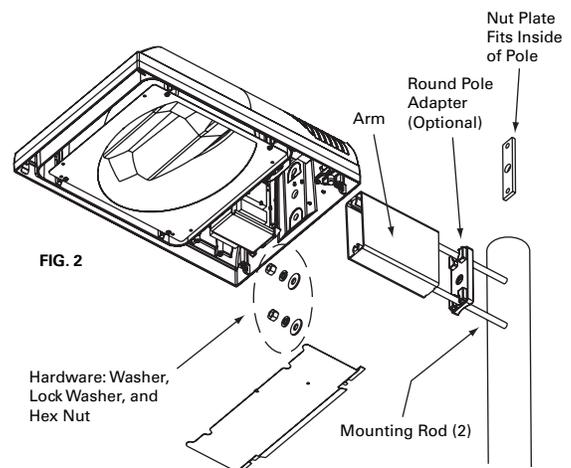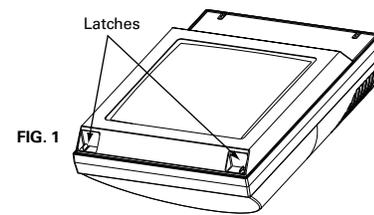

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

NOTE: Specifications and dimensions subject to change without notice.

INSTALLATION INSTRUCTIONS

IMPORTANT: READ CAREFULLY BEFORE INSTALLING FIXTURE.

Talon Medium Sheet 2 of 3

11/29/07

IMI-687



WARNING: Risk of Fire/Electric Shock. If not qualified, consult an electrician.

WARNING: Risk of Electric Shock. Disconnect power at fuse or circuit breaker before installing or servicing.

WARNING: Risk of Burn. Disconnect power and allow fixture to cool before changing bulb or handling fixture.

WARNING: Risk of Personal Injury. Fixture may become damaged and/or unstable if not installed properly. Tighten all fixture components to their recommended torque values.

WARNING: Risk of Fire/Electrical Shock. Upside down installation can result in overheating or accumulation of water in fixture. Install right side up.

5. With the pole and fixture(s) raised into position, place the power tray onto the hinges of the housing electrical compartment and let it hang free. Locate the power connector plug and rotate the power tray until the connection can be made with the mating connector in the housing. Raise the powertray until the two wing screws engage and tighten until fully snug.

6. Replace door on the hinges at the rear of the housing, rotate into position, and assure that both latches are fastened securely.

FIXTURE MAINTENANCE



RELAMPING

1. Disengage both latches and open the door. Do not let the door swing freely on the hinges.
2. Replace the lamp with the appropriate type and wattage and reassemble the refractor to the upper housing. **FIG. 3**
3. Close the door and assure that the latches are securely fastened.

PLUG-IN STARTER REPLACEMENT

This procedure applies to fixtures with a plug-in type starter. Disengage both latches and open the door. Do not let the door swing freely on the hinges. Loosen the power tray thumb screws, unplug the power connector as you lower the powertray, and continue lowering until the powertray hangs free on the hinges. The starter is located in the position shown. Remove and replace. Reverse the directions to secure the powertray and the door after starter replacement.

1. Remove the plug-in starter from the receptacle and replace. **FIG. 4 and FIG. 5**
2. Assure that the wing screws on the powertray and both latches on the door are fastened securely.

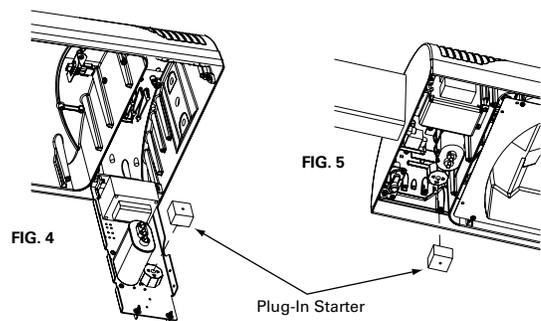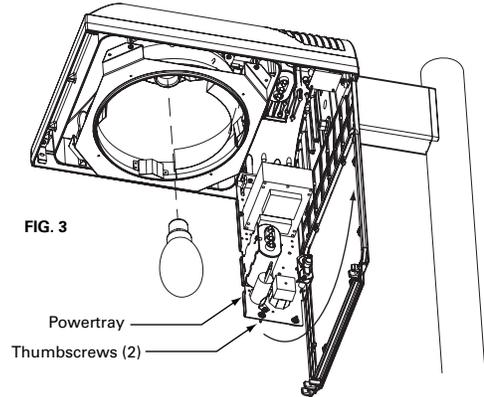

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

NOTE: Specifications and dimensions subject to change without notice.

INSTALLATION INSTRUCTIONS

IMPORTANT: READ CAREFULLY BEFORE INSTALLING FIXTURE.

Talon Medium Sheet 3 of 3

11/29/07

IMI-687



WARNING: Risk of Fire/Electric Shock. If not qualified, consult an electrician.

WARNING: Risk of Electric Shock. Disconnect power at fuse or circuit breaker before installing or servicing.

WARNING: Risk of Burn. Disconnect power and allow fixture to cool before changing bulb or handling fixture.

WARNING: Risk of Personal Injury. Fixture may become damaged and/or unstable if not installed properly. Tighten all fixture components to their recommended torque values.

WARNING: Risk of Fire/Electrical Shock. Upside down installation can result in overheating or accumulation of water in fixture. Install right side up.

NEMA PHOTOCONTROL REPLACEMENT

1. The photocontrol is mounted on top the housing. **FIG. 6**
2. Remove the photocontrol by twisting counterclockwise and replace.

OPTIC DISTRIBUTION AND ORIENTATION

The Talon Medium fixture is offered with some optics that have directional distributions. For aiming purposes, the Talon Medium was designed with the flexibility to allow each of its optics to be rotated to any of four positions, located at 90° increments. To change the optic orientation, open the door and remove the lamp. Use a screwdriver to remove the four screws as shown in **FIG. 7**. Reposition the optic, insert the screws and tighten securely.

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

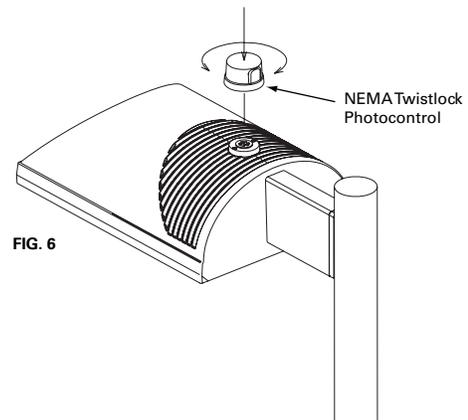


FIG. 6

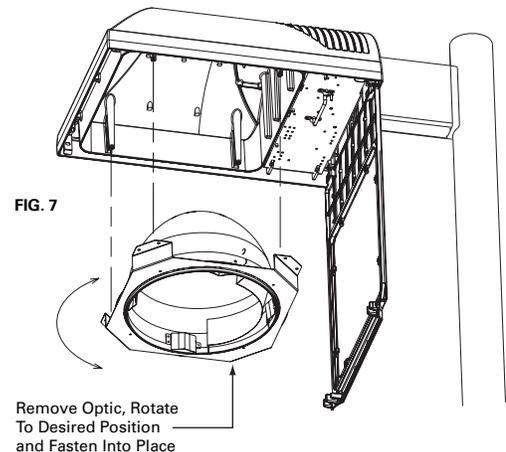


FIG. 7

Remove Optic, Rotate To Desired Position and Fasten Into Place

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

NOTE: Specifications and dimensions subject to change without notice.

INSTALLATION INSTRUCTIONS

IMPORTANT: READ CAREFULLY BEFORE INSTALLING FIXTURE.

Talon Medium Sheet 3 of 3

11/29/07

IMI-687



WARNING: Risk of Fire/Electric Shock. If not qualified, consult an electrician.

WARNING: Risk of Electric Shock. Disconnect power at fuse or circuit breaker before installing or servicing.

WARNING: Risk of Burn. Disconnect power and allow fixture to cool before changing bulb or handling fixture.

WARNING: Risk of Personal Injury. Fixture may become damaged and/or unstable if not installed properly. Tighten all fixture components to their recommended torque values.

WARNING: Risk of Fire/Electrical Shock. Upside down installation can result in overheating or accumulation of water in fixture. Install right side up.

FCC Statement

Declaration of Conformity

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Énoncé de la FCC

Déclaration de conformité

Remarque : Cet équipement a été mis à l'essai et déclaré conforme aux limites établies pour un dispositif numérique de catégorie A en vertu de l'article 15 des règlements de la FCC. Ces limites sont conçues pour assurer une protection raisonnable contre tout brouillage nuisible lorsque l'équipement fonctionne dans un environnement commercial. Cet équipement produit, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé et utilisé conformément aux instructions, il peut créer des parasites nuisibles aux communications radio. L'utilisation de cet équipement dans une installation résidentielle est susceptible de provoquer des interférences nuisibles, auquel cas l'utilisateur devra corriger ces interférences à ses propres frais.

Declaración de la FCC

Declaración de conformidad

Nota: Se ha probado este equipo y se ha determinado que cumple con los límites para un dispositivo digital de Clase A, de conformidad con la Sección 15 de las normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales cuando el equipo se opera en un entorno comercial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con el manual de instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Es probable que el funcionamiento de este equipo en un área residencial cause interferencia perjudicial, en cuyo caso el usuario deberá corregirla a su propio costo.

Warranties and Limitation of Liability

Please refer to www.cooperlighting.com/legal for our terms and conditions.

Garanties et limitation de responsabilité

Veuillez consulter le site www.cooperlighting.com/legal pour obtenir les conditions générales.

Garantías y Limitación de Responsabilidad

Visite www.cooperlighting.com/legal para conocer nuestros términos y condiciones.

These instructions do not claim to cover all details or variations in the equipment, procedure, or process described, nor to provide directions for meeting every possible contingency during installation, operation or maintenance. When additional information is desired to satisfy a problem not covered sufficiently for user's purpose, please contact your nearest representative.

NOTE: Specifications and dimensions subject to change without notice.